

This exploded view diagram illustrates the assembly of a spray gun. The components are numbered as follows:

- 1-6:** Trigger gun assembly including the handle (1), trigger (2), trigger spring (3), trigger housing (4), trigger pin (5), and trigger nut (6).
- 7-9:** Spray gun body assembly including the spray gun body (7), spray gun body cap (8), and spray gun body cap nut (9).
- 10-13:** Spray gun nozzle assembly including the spray gun nozzle (10), spray gun nozzle cap (11), spray gun nozzle cap nut (12), and spray gun nozzle cap pin (13).
- 14-16:** Spray gun trigger gun assembly including the spray gun trigger gun (14), spray gun trigger gun cap (15), spray gun trigger gun cap nut (16), and spray gun trigger gun cap pin (17).
- 18-20:** Spray gun trigger gun cap assembly including the spray gun trigger gun cap (18), spray gun trigger gun cap nut (19), and spray gun trigger gun cap pin (20).
- 21-24:** Spray gun trigger gun cap assembly including the spray gun trigger gun cap (21), spray gun trigger gun cap nut (22), spray gun trigger gun cap pin (23), and spray gun trigger gun cap pin (24).

Nr.crt	Denumire produs	Product name	Cod comanda
1	Cap duza	Copper nozzle cap	psrs150-1
2	Oring	Copper nozzle O-ring	psrs150-2
3	Duza	nozzle Copper	psrs150-3
4	Capac duza	nozzle cap	psrs150-4
5	Scaun cui declansator	Water sealing pad	psrs150-5
6	Cui declansator	Valve core	psrs150-6
7	Arc	Valve core spring	psrs150-7
8	Saiba	Valve core spring pad	psrs150-8
9	oring	Valve core rubber pad	psrs150-9
10	Maner	Trolley cap	psrs150-10
11	Cacac	Gland	psrs150-11
12	Clapeta blcare	Fixed button	psrs150-12
13	Parghie	Pressure plate	psrs150-13
14	Cui	Valve core insert	psrs150-14
15	Tija	Tie rod	psrs150-15
16	Maner	tank	psrs150-16
17	Piston	piston	psrs150-17
18	Oring	Piston pad	psrs150-18
19	Coducta	Suction pipe	psrs150-19
20	filtru	Small Filter	psrs150-20
21	Oring	tank rubber pad	psrs150-21
22	Bazin	tank	psrs150-22
23	Tub de presiune	inflator	psrs150-23
24	Dop	Pump leather plug	psrs150-24